

Floor Pump


Instruction Manual

PU002

Please read all instructions before installing and using your floor pump.

Some single head pump models have a presta valve adapter set into the thumb lock.

Warning ⚠
*Please refer to the PSI rating for each pump model.
It is recommended to use both feet on the base and both hands on the handle when pumping.*

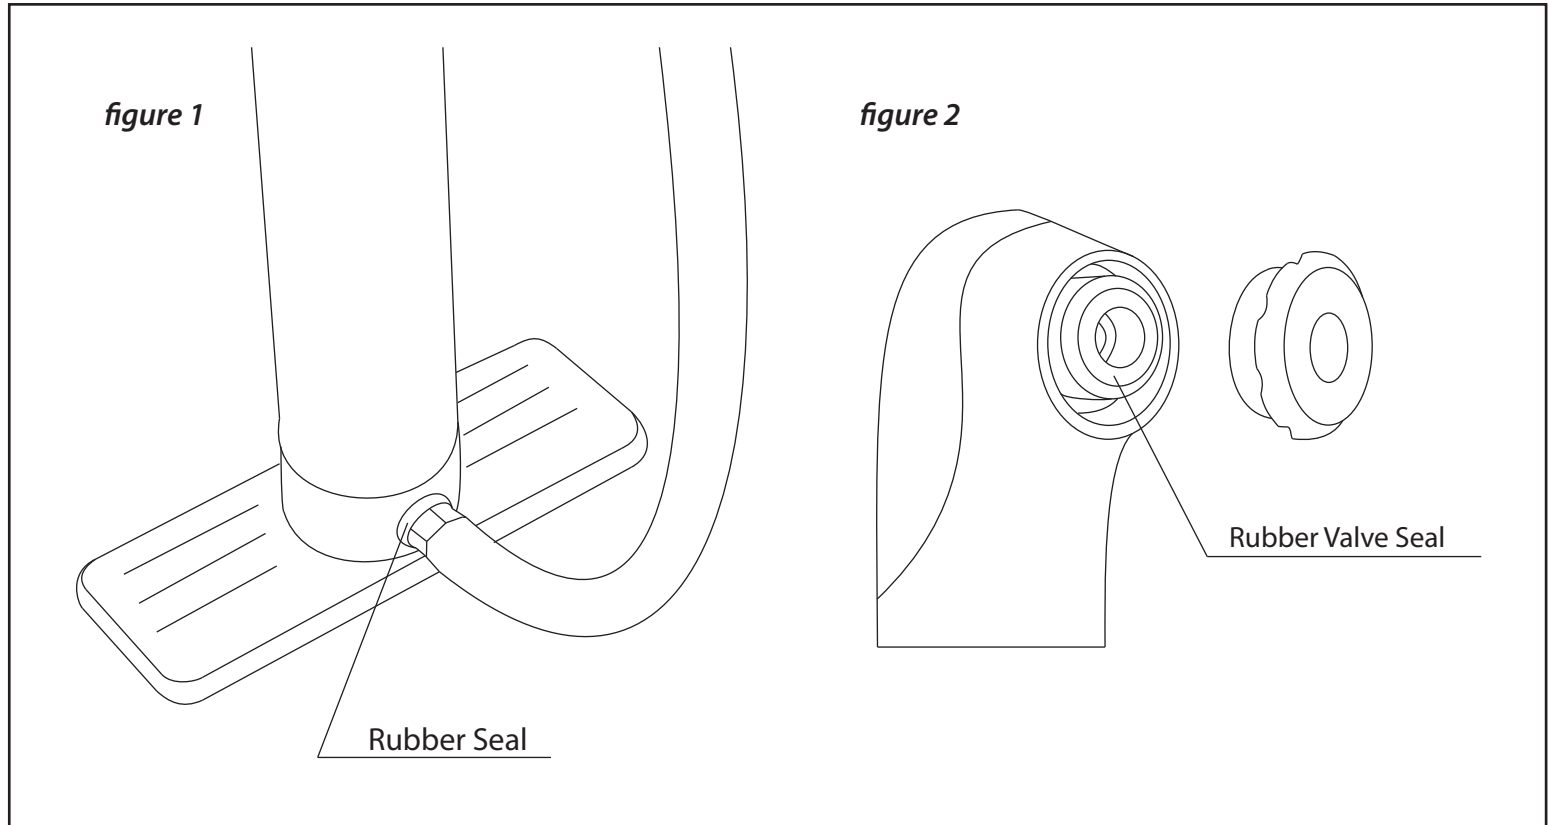

Installation/Use

Hose Installation (*figure 1*)

Not all models require hose installation

1. Thread the pump hose into the base of the pump BY HAND until pump hose rubber seal is snug against the base. **Do not use tools to complete this step.**
2. Perform a pressure check by placing your thumb over the pump head hole tightly and attempting to press down the pump handle. If the handle presses down easily and air is escaping the base, the rubber seal is not sitting correctly against the base and an adjustment must be made. Tighten or loosen the pump hose and perform the pressure check again until the pump handle is fairly difficult to push down and there is no air escaping the barrel.

Using the Pump

1. Attach pump head to valve and flip thumb lock.
2. Place at least one foot on the base of the pump to stabilize it while pumping.
2. Start pumping using handle with two hands.

For non dual-head models you can change the pump head from schrader to presta by removing the head cap and reversing the direction of the rubber valve seal that sits in the center shown in **figure 2. **Not all single head models have a reversible valve.***

**Some models have a gauge attached. Please use this gauge to pump a safe amount of pressure into your tubes/tires. In most cases the max PSI of the tire will be printed on the sidewall. For your own safety do not exceed the tire's max PSI.*