

SL-V Convertible Levers


Instruction Manual

BL001

Please read all instructions before installing your new brake levers.

Warning

Failure to install brake levers properly may result in damage to your bicycle, serious injury, and/or death.

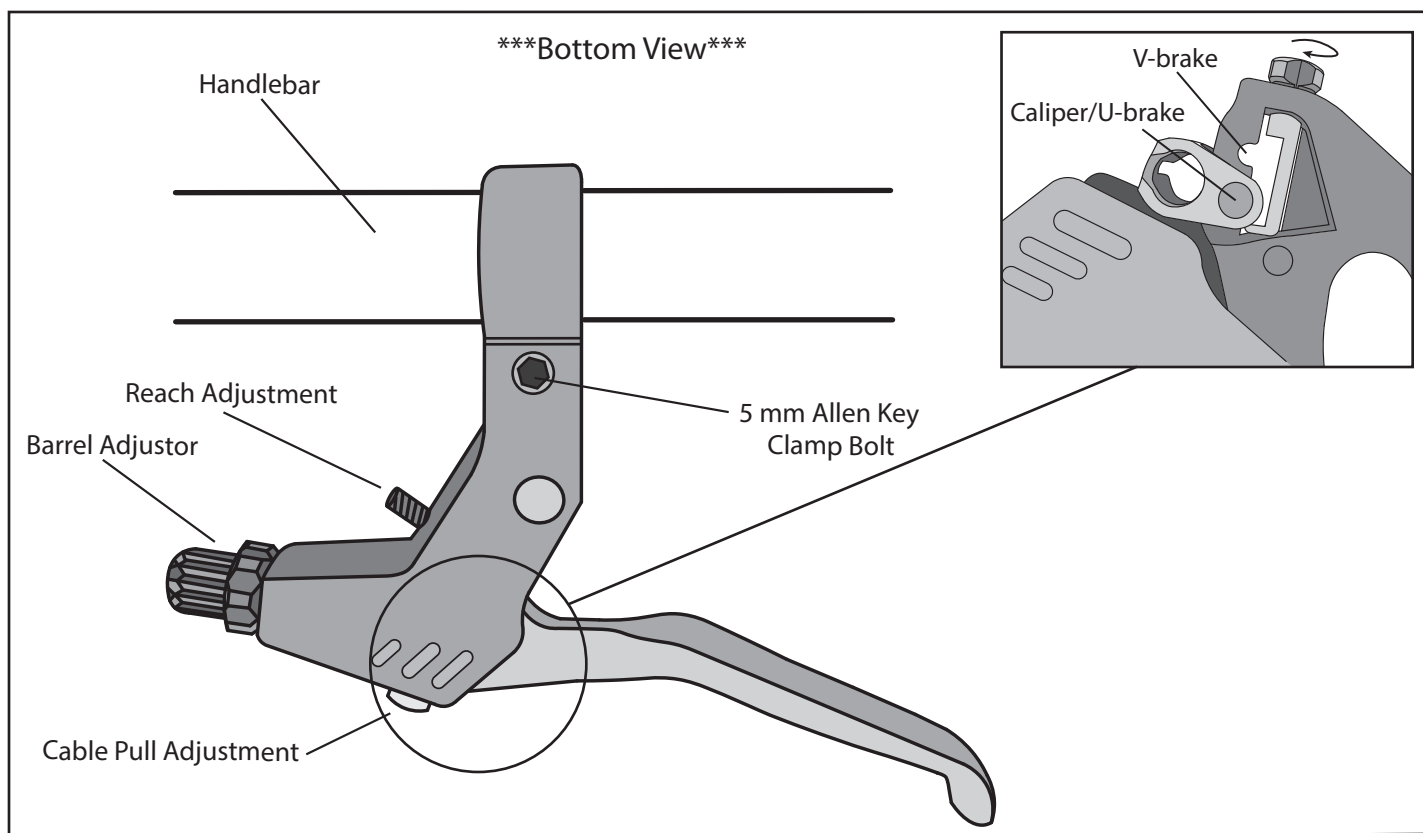

Installation/Use

1. Remove the grips from handlebar.
2. Using a 5mm allen key, loosen the bolt in the brake lever clamp.
3. Slide brake lever in place on handlebar.
4. Tighten the brake lever clamp bolt between 5 - 7 Nm.
5. Slide the grip back onto the handlebar.

Cable Adjustment

1. To adjust cable pull, turn the cable pull adjustment knob located on the top of the lever 180 degrees.
2. Pull the lever blade back, exposing the adjustment cam.
3. Move the barrel harness to the desired position. The top notch is for use with linear pull V-brakes, while the lower notch is for use with standard caliper style and U-brakes.
4. Return the cable pull adjustment knob to its original position, so that the cam locks the barrel harness in place.

SUNLITE