
DuoTrigger Convertible Levers

Please read all instructions before installing your new brake levers.

Instruction Manual BL002

Warning /

Failure to install brake levers properly may result in damage to your bicycle, serious injury, and/or death.

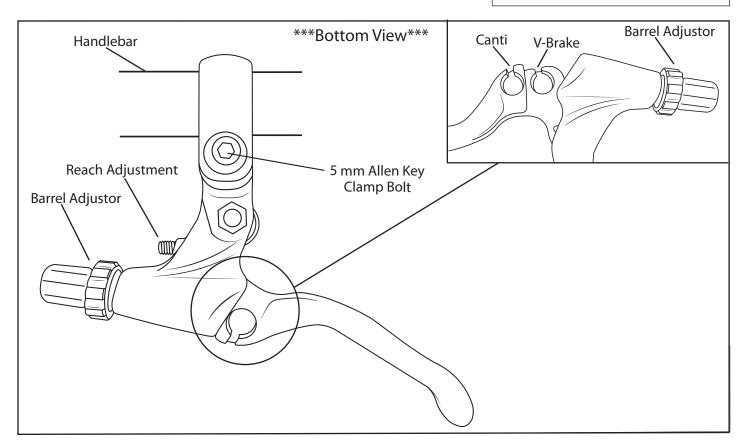

Installation/Use

- 1. Remove the grips from handlebar.
- 2. Using a 5mm allen key, loosen the bolt in the brake lever clamp.
- 3. Slide brake lever in place on handlebar.
- 4. Tighten the brake lever clamp bolt between 5 7 Nm.
- 5. Slide the grip back onto the handlebar.

Cable Adjustment

- 1. To adjust the cable pull, pull the lever blade as if braking to expose both barrel wells.
- 2. Choose the appropriate barrel well per type of brakes, the hole nearest the barrel adjuster is for V-Brake and mechanical disc applications while the further is for cantilever or U-Brakes.
- 3. Install cable per manufacturer's specifications and check for proper routing and adjustments before use.

