

Gold Tec Front Rack


Instruction Manual

RA006

Please read all instructions before installing your new cargo rack.

Warning

Failure to install cargo accessories properly may result in damage to your bicycle, serious injury, and/or death.

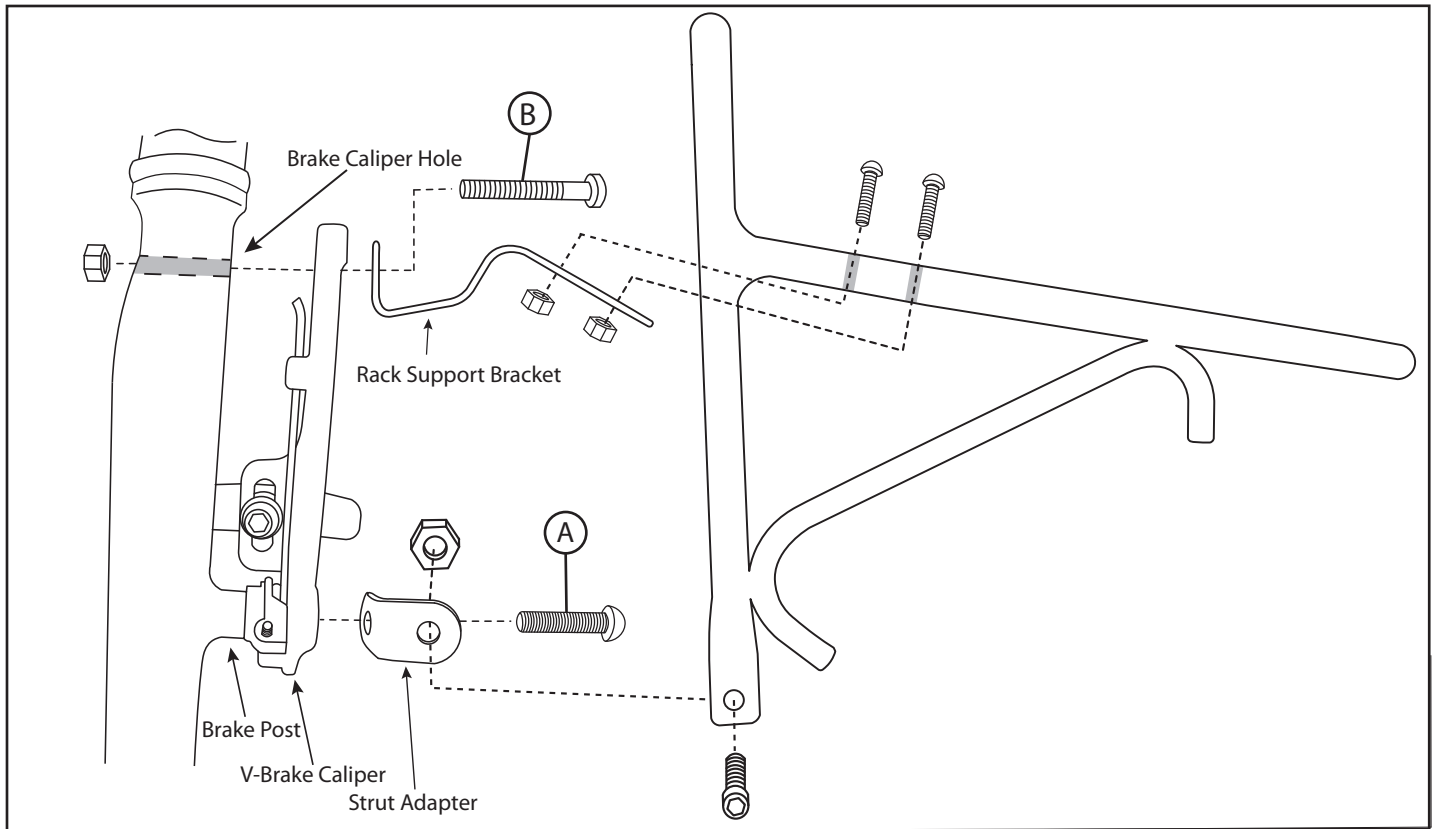

Installation

1. Begin by removing the brake mounting bolts (A) from the brake posts, leaving the brake arms in place.
2. Install the strut adapter to both sides as shown above, reusing the brake mounting bolts and secure.
3. Install the rack support bracket using the supplied long bolt (B) through the hole at the top of fork.
4. Attach the rack to support bracket and strut adapters as shown above using the included hardware.
5. Level the front rack by loosening and retightening the mounts as necessary. In some cases, bending of the rack support bracket may be required to achieve the desired angle.
6. Once level make sure all mounts and bolts are fully tightened.
7. Check for proper function and clearance of all brakes and brake cables before use.

SUNLITE