

# V-Brake


## Instruction Manual

VB001

*Please read all instructions before installing your new brakes.*

### Warning

Failure to install brake components properly may result in damage to your bicycle, serious injury, and/or death.

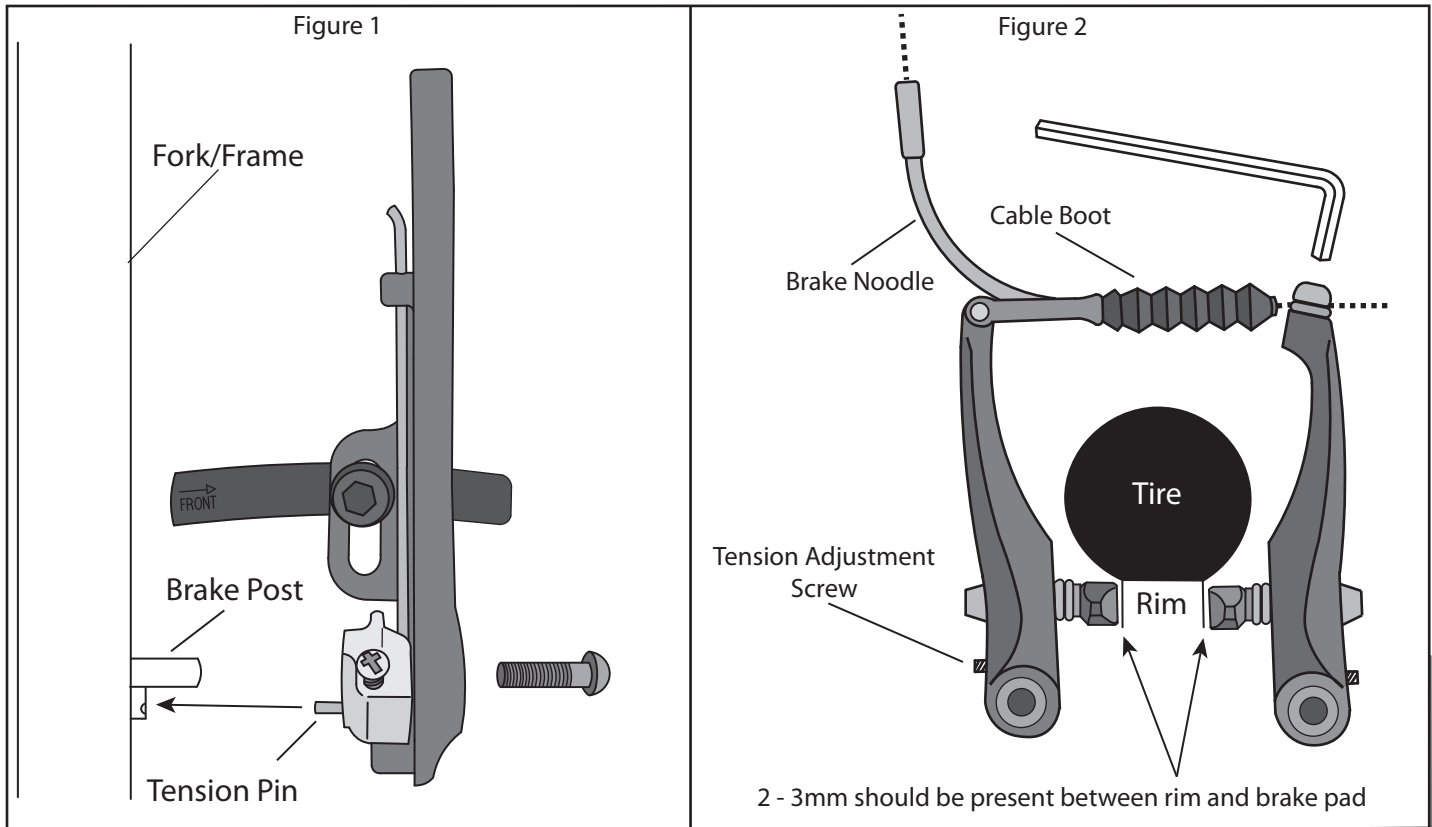

## Installation

1. Place caliper arm onto the brake post on the frame/fork making sure to insert the tension pin into the center hole of the mounting boss. (Figure 1)
2. Insert bolt through caliper arm and into brake boss and tighten to 5-7Nm using a 5mm hex wrench. (Not included)
3. Repeat steps 1 and 2 for other side.
4. Thread brake cable through brake noodle and boot and install to caliper as shown.
5. Adjust brake tension so that the brake pads are approximately 2 to 3mm away from the rim surface on each side - Further adjustments can be made by utilizing a different tension pin mounting hole as well as turning the tension adjustment screw.
6. Depress the brake lever several times, fully engaging the brake then check for play or stretch in the cable, making adjustments as necessary.

Brake cable stretch is normal after initial use and adjustments will be necessary.  
Always check that the brake and other systems are properly prior to riding.

**SUNLITE**