


Adjustable Training Wheels

Instruction Manual TW003

Please read all instructions before installing and using your training wheels.

Warning

Failure to install training wheels properly may result in serious injury/death and or damage to your bicycle.

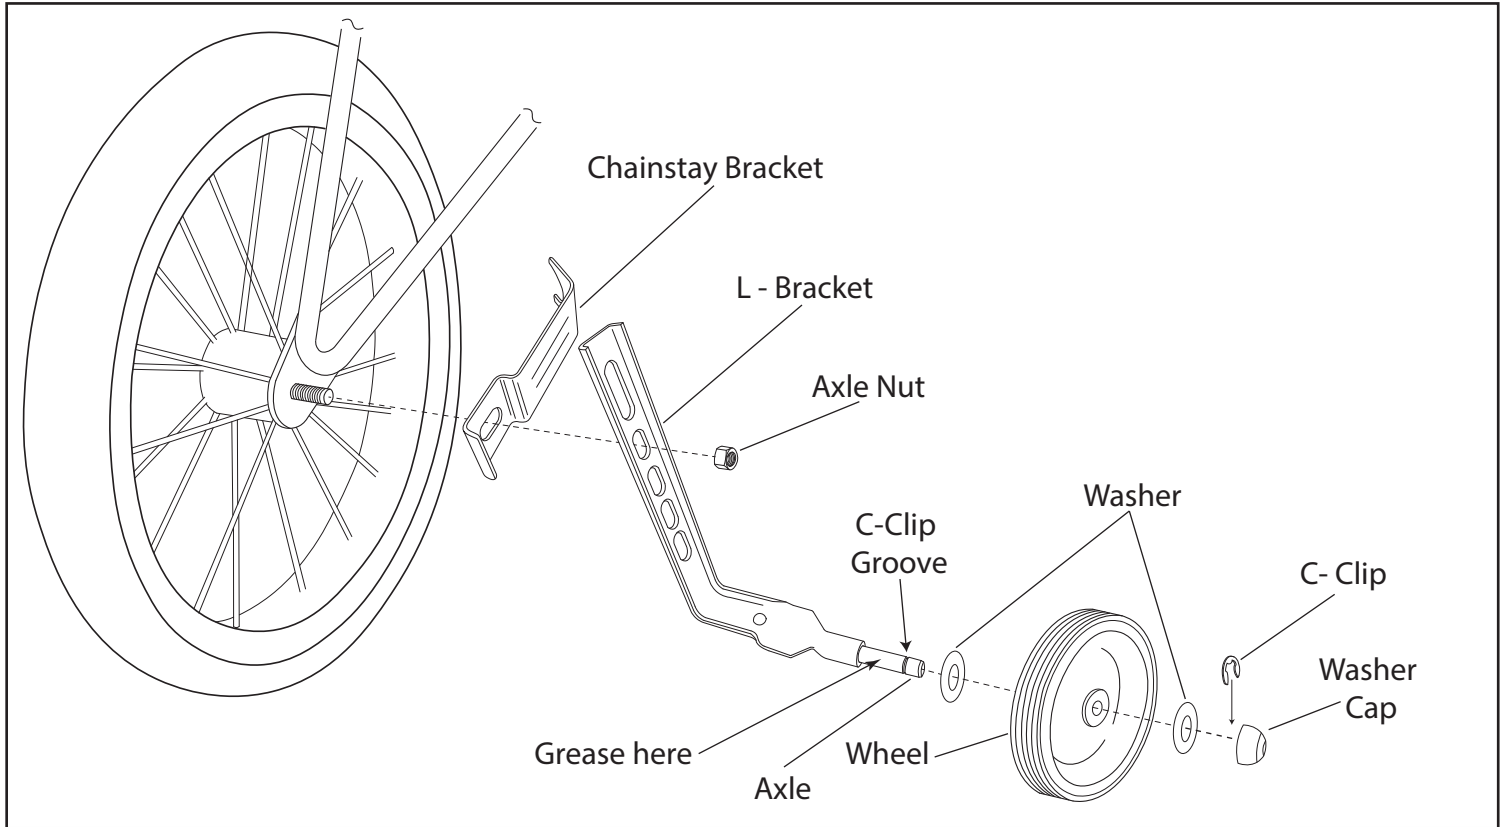

Installation

1. Place a light amount of grease on the Axle spindle where indicated. (Grease not included)
2. Place 1 washer, then a wheel, then another washer onto the axle as shown in the illustration.
3. Press C-Clip into groove on axle so that it holds the wheels and washers in place.
4. Place Washer Cap on the end of the axle and repeat for other side.
5. Remove rear axle nuts of bicycle. Position Chainstay Bracket and assembled L-Bracket so that the training wheel is 1/2" to 3/4" off the ground with the bike upright.
6. Replace axle nut leaving it slightly loose, use an additional washer if necessary and repeat for otherside.
7. Once both sides are assembled check that the wheels are level and tighten axle nuts fully.